

30
YEARS
OF SIMPLICITY
emporia



emporia
HAPPY

Thank you for purchasing an emporia product!
Please read this user guide before attempting to use your phone.



Eveline Pupeter, emporia Telecom

www.emporia.eu


English

› YOUR MOBILE PHONE AT A GLANCE




- 1 **Loudspeaker**
- 2 **Display (screen)**
- 3 **Speed-dial keys**
- 4 **Green key**
 - Start or accept a call
 - In the menu: Confirm selection
 - On standby: Access **Call history**
- 5 **Arrow keys**
 - Use these to flick through your **Contacts** and the **Menu**.
 - When the phone is on standby, press to call up the **Menu**.
 - When the phone is on standby, press to access **Contacts**.
- 6 **Red key**
 - When in a call: End
 - When in the menu: One step back
 - When entering digits or letters: Delete
 - Power button
- 7 **1 key (voicemail)**
- 8 **Key: Keypad lock**
- 9 **Torch button**
- 10 **Key: Silent mode**
- 11 **Headset port** (Attention: This is not a charger port!)
- 12 **Port for USB charging cable**
- 13 **Opening for removing the battery cover**
- 14 **Volume controls**


15 Torch (LED)

16  Emergency button
(optional)

17 Battery cover


> Symbols on the screen


 Network signal strength


 Roaming (abroad)

 Battery indicator


 Missed call

 Call forwarding

 New text message
(SMS)


 Profile: Silent/Sleep
mode

MAX Profile: Maximum

 Profile: Meeting/
Theatre mode

 
 
 Alarm on

 Bluetooth activated

 Bluetooth connected

 
 
 
1. PUTTING THE PHONE INTO OPERATION

1.1 Inserting a SIM card

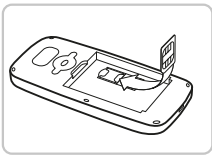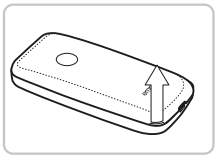

1. Remove the battery cover (opening in the bottom left-hand corner).
2. Insert the SIM card into the SIM card holder with the gold contacts facing down.


1.2 Inserting and charging the battery

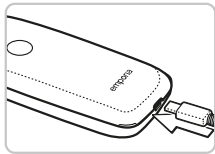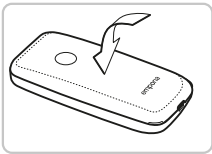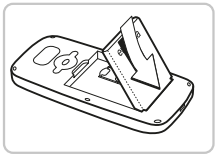

1. Insert the battery, making sure that the battery contacts touch the phone's gold contacts.
2. Place the battery cover over the battery and click it into place.
3. Insert the charging cable into the USB port on the phone and the power plug into a mains outlet.


! *Charge the battery for at least 4 hours before the first time you use it. Only use batteries and chargers that are permitted for use with this specific model.*

1.3 Turning on the phone



- Press and hold the red  key for at least 2 seconds until the emporia logo appears. It will take a few seconds for the home screen to be displayed.

1.4 Entering a PIN code



Enter the four-digit PIN code for your SIM card when asked to do so and confirm the entry.

 *You have a maximum of three attempts to enter the correct number. If you enter the wrong number three times in a row, you will only be able to unblock the SIM card with the PUK code. You will find your original PIN code and PUK code in the documents supplied with your SIM card by your network operator.*

1.5 Setting the language, time and date


1. Use  to select a **Language** and then confirm your selection by pressing the green  key.
2. Set the **Time** and **Date** and then save these settings.

 
1.6 Saving battery power

After a few seconds of inactivity, the screen will go dark to save battery power. In the event of an incoming call or you pressing any key, the screen will light up again. If the automatic keypad lock is on, the phone will only respond if the green  key or the  key is pressed.


2. USING THE PHONE

2.1 Home screen

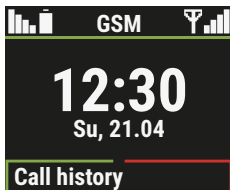

If your phone is on but not using a function, it will display the home screen. You can return to the home screen any time by pressing the red  key several times.

 


2.2 Menu

The  key will display the menu.

 
The menu is a list that enables you to manage the phone's various functions and adapt the phone to your needs.

- Use the arrow keys to scroll through the menu.
- The items available in the menu are **Messages**, **FM Radio**, **Tools**, **Contacts**, **Call history** and **Settings**.
- Use the green  key and red  key beneath the screen to confirm your selection or to return to the home screen.

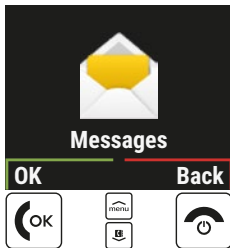



2.3 Dual-function keys

Some keys have additional functions if they are pressed and held down for a few seconds:

 **key:** Listen to your voicemail.








 **key:** Turn the keypad lock on or off in standby mode.

 **key:** Turn silent mode on or off.

 **Torch button:** Torch on continuously when the phone is on




2.4 Writing text



You enter text using the keypad.

- To input text, press a number key multiple times (e.g. 2 × , 1 × , 3 × , 3 ×  and 3 ×  for Hallo)
- Special characters and symbols have been assigned to the various keys, but can differ in some languages.
- Pressing the  key allows you to select special characters from a table.
- Use the  key to switch between the **abc**, **ABC**, **Abc** and **123** input methods.

3. CALLS


3.1 Accepting, rejecting or ending a call

- **To answer:** Press the green  key to **accept** the call.
- **To decline or end a call:** Press the red  key.
- To mute the ringtone temporarily, press the  volume control button.





 *If the screen has gone dark during a call, press the red  key twice.*


3.2 Calling someone

› Dialling a number

1. Enter the phone number you want to dial (incl. the area code) using the keypad.
2. Start the call by pressing the green  key.

› Using the redial function

1. When on the home screen, press the green  key.
Your call history will be displayed.
2. Use the arrow keys,  and , to select a number.
3. Start the call by pressing the green  key.

 *To go hands-free during a call, open **Options** and turn on the speaker.*



4. MESSAGES (SMS)

- › Menu items: **Write message, Received, Unsent, Sent, Delete messages, Text templates, Send contact via SMS, SMS in Contacts and SMS settings**

4.1 Writing and sending a message

1. Open **Menu** ⇒ **Messages**.
2. Select **Write message**.
3. Enter the text using the keypad.
4. To specify a recipient for the SMS, open **Options** and select **Send**.
5. You can now select a contact from the phone book or type in a phone number using the keypad.

4.2 Reading a message

1. When you receive a new message, a symbol, , will appear on the home screen.
2. Press the green  key for **View** to read the message immediately.
3. You can find the text message again later on in **Menu** ⇒ **Messages** ⇒ **Received**.
4. To read a message, tap on it.



5. FM RADIO

- › Menu items in **Options: Station list, Manual input, Auto search, Loudspeaker and Back**

5.1 Searching for a station

You can set the station using the arrow keys,  and .

5.2 Adjusting the volume

You can adjust the volume of the radio using  and  on the side of the phone.


You cannot change the volume if you are in a menu item on the options list. In this case, close the Options menu first.

5.3 Station list

This list shows all the stations already saved.

5.4 Manual input

If you know the frequency of the station you want, you can enter it here directly.

Press the  key for the decimal point.



5.5 Auto search

This function searches for all detectable stations and saves them in the station list together with their frequencies.

6. TOOLS


➤ Menu items: **Alarm, Calendar, Calculator, FM Radio and Bluetooth**

6.1 Alarm

1. Open **Set time**.
2. Enter your desired **Alarm time** and then **Save** it.
3. The alarm is now activated and will go off at the time you have set every day.
4. When the alarm is ringing, you can press the red  key to turn it off or the green  key to activate the snooze function.
5. Select **Off** to deactivate the alarm permanently.

6.2 Bluetooth





1. Turn the Bluetooth function **On**.
2. Tap on **Connect** and on **Search for new devices**.
A list of available devices will be displayed.
3. Select the device you want to pair the phone with from the list.
4. Follow the instructions to pair the devices.

 *Devices that have been connected before will be recognised and connected automatically.*

7. CONTACTS


- › Menu items: **Search for name, Add contact, Edit contact, Delete, Send contact via SMS, Copy contact, My number, Speed-dial keys, Emergency contacts, Contact settings and SMS in Contacts**

7.1 Searching for a contact in the phone book

1. When on the home screen, press the phone book key, , or open **Menu** ⇒ **Contacts** ⇒ **Search name**.
2. Use the arrow keys,  and , to scroll through the entries or use the keypad to type the first letter of the contact you are looking for.
3. Start the call by pressing the green  key.




7.2 Adding a contact

1. Open **Menu** ⇒ **Contacts** ⇒ **Add contact**.
2. Enter the person's name and the phone number and then **Save** them.

 *Always save names and numbers with the international dialling code, e.g. +41 for Switzerland, +43 for Austria and +49 for Germany.*

7.3 Saving a speed-dial key

You can assign speed-dial keys to numbers you call often.

1. Press one of the speed-dial keys: ,  or 
2. Enter a **Name** and **Number** or **Search** for a contact in the phone book.

7.4 Changing or deleting a speed-dial key

1. Open **Menu** ⇒ **Contacts** ⇒ **Speed-dial keys**.
2. Select a speed-dial key from the list.
3. Change or delete its link to a particular contact.

7.5 SMS in Contacts

You can have phone book entries sent to you by text message that will automatically be added to your phone book.

The phone number will automatically be stored in your contacts when you receive an SMS with the following content:

#Name#Number#, e.g.: #Martin#+436641234567#

1. Open **Menu** ⇒ **Contacts** ⇒ **SMS in Contacts**.
2. Select **On** or **Only from contacts**.

8. SETTINGS

- › **Menu items: Silent/Sleep mode, Sounds and alerts, Handset volume, Display and lights, Time and date, Language, Call waiting, Call forwarding, Withhold number, Auto keypad lock, Network selection, Voicemail number, Emergency contacts, Emergency button, Security settings, 0000 to enter settings and Master reset**

8.1 Sounds and alerts

You can personalise the settings for tones, alerts and vibration or select a set of predefined settings (profile).

- › **Profile: Silent/Sleep mode**
Visual notifications only (torch LED flashes and notifications appear on the screen), no ringtone and no vibration function
- › **Profile: Meeting/Theatre mode**
Visual notifications (torch LED flashes and notifications appear on the screen), device vibrates and no ringtone
- › **Profile: Maximum/Bus mode**
Key tones, SMS tone and vibration function activated, ringtone volume is set on maximum


8.2 Keypad lock

You can use the keypad lock to prevent keys on your phone from being pressed accidentally.

› Manual keypad lock

Press the  key for 2 seconds.

Keypad locked appears on the screen.

The  symbol on the screen then shows that the keypad is locked.

› Automatic keypad lock




Open the **Settings** menu and then the item **Auto keypad lock**. Now select whether the keypad should be locked automatically after **5 sec.**, **15 sec.**, **30 sec.**, **1 min.** or **5 min.** of inactivity or whether this function should be switched off.

› Unlocking the keypad lock

Press the  key for 2 seconds.

Keypad unlocked will appear on the screen.

The phone will then respond to every press of a key again.

 *If the keypad lock is activated, the phone will only respond if the green  key or the  key is pressed. If any other key is pressed, the screen will remain dark to save energy.*

8.3 Call forwarding

Specify whether you want certain calls (All calls, If busy, No answer and/or No signal) to be forwarded to your voicemail or another number.


8.4 Withholding your number

Specify whether you would like your number or just »Private number« to be shown to the recipient when making calls.

8.5 Voicemail number

Enter the number for your voicemail.

You will find this number in the documents supplied by your network provider.

Press and hold the  key to listen to your voicemail.

8.6 Security settings

PIN: PIN request on/off, change PIN

Phone code: On/Off, change (factory preset code: 1234)

8.7 0000 to enter settings

Activate this safety mode to prevent changes being made to settings unintentionally.

8.8 Master reset




You can restore all the factory settings on your phone (factory preset phone code: 1234).


9. EMPORIA EMERGENCY CALL FUNCTION

Read the instructions carefully and set the emergency function according to your needs. You can save up to five emergency contacts (family members, friends and official institutions).

- In an emergency, press and hold the emergency button on the back of the phone.
- The five preset numbers will be dialled automatically in the order in which you have saved them. If it is not possible to get through to anyone on the first number, the second number will automatically be dialled. If it is not possible to get through to anyone on the second number, the third number will automatically be dialled, and so on. (The phone will go through a list of five numbers a maximum of three times.)
- At the same time as each emergency call, a text message (SMS) will be sent to the contact, saying:
»You are about to receive an emergency call that will be ended after 1 minute. Return the call immediately. Your call will automatically be answered.«

i *The emergency call will automatically be ended after 1 minute. This prevents the emergency call from going through to a contact's voicemail or answerphone. and it is for this reason that the recipient of the emergency call has to call back the person who made the emergency call. The person's emporia phone will then automatically answer this call in hands-free mode.*



-
- From the moment you make an emergency call, your emporia phone will automatically answer any incoming calls for one hour. To disable this function, press and hold the red  key for approx. 3 seconds or turn your device off completely using the  key and then turn it on again.
 - To cancel an emergency call, press and hold the red  key.
 - During the emergency call, a warning tone will sound continuously to alert anyone nearby and the person being called.
 - If you do not have any emergency contacts saved, have no credit on your prepaid phone card or are connected to another network without permission (e.g. roaming is not activated), 112 will be dialled when you press the emergency button.

 *If you want to add the number of an official institution such as the police or fire brigade as an emergency contact, you must check that this is okay with the respective institution beforehand. Emporia does not assume liability for any costs incurred through you calling such an institution by mistake.*


› **Adding/editing emergency contacts**

In the **Settings** menu ⇒ **Emergency contacts**

⇒ **Add emergency contact**

⇒ Select an entry (e.g. **Emergency contact 1**) using the arrow keys,  and .

⇒ Select **Ok** by pressing the green  key.

⇒ Select **Private** or **Help organisation** by pressing the green  key.

⇒ Select a contact.

› **Enabling the emergency button**

In the **Settings** menu

⇒ **Emergency contacts**

⇒ **Emergency button**

⇒ **On/Off**

› **Pre-alarm**

The pre-alarm is a warning tone that sounds for 10 seconds and alerts anyone nearby to the emergency call.

After this, the emergency call sequence starts.

In the **Settings** menu,

⇒ **Emergency contacts**

⇒ **Pre-alarm**

⇒ **On/Off**

› GUARANTEE AND SERVICE

Manufacturer:	emporia telecom GmbH + CoKG Industriezeile 36, 4020 Linz, Austria
Importer:	Emporia UK and Ireland Limited · Cardinal Point, Park Road, Rickmansworth, Hertfordshire, WD3 1RE, United Kingdom
Contact:	www.emporiatelecom.co.uk or www.emporiatelecom.ie
Brand name:	emporia
Model:	emporiaHAPPY (E30)

› Scope of delivery

- **Mobile phone:** emporiaHAPPY (E30)
- **Battery:** AK-MD212
- **USB cable**
- **AC adapter:** —
- **Table charging unit:** TL-E30

› Support

- **Emporia Service Centre**
service@emporiatelecom.co.uk
Monday-Friday, 12⁰⁰-4⁰⁰ pm
- **United Kingdom · EN**
www.emporiatelecom.co.uk/
support/contact
+44 1923 947778
- **Ireland · EN**
www.emporiatelecom.ie/
support/contact
+353 0818 000 102

› Guarantee

This guarantee is only valid if original batteries supplied by emporia have been used.

- **Mobile phone:** 12 months
- **Battery:** 6 months

› Technical details

- **Dimensions:** 114.5 × 52 × 12 mm
- **Weight:** 70 g
- **Battery:** Li-ion 3.7 V, 800 mAh, 2.96 Wh (replaceable)
- **AC adapter:**
input: 100–240 V AC, 50/60 Hz, 0.15 A;
output: DC 5.0 V, 0.6 A
- **Table charging unit:**
input = output
- **Standby time:** 200 h*
- **Talk time:** 250 min*
(*The battery life can be reduced depending on network coverage and active applications.)
- **Internal antenna:**
SAR body: 1.10 W/kg
SAR head: 0.45 W/kg
SAR-limbs: 1.33 W/kg
- **Operating temperature range:**
-10°– +40°C
- **Hearing Aid Compatible M4/T4**
- **Bluetooth V 2.1**

› Frequencies

- **BT:** 2402 MHz - 2480 MHz
Transmitter power: < 0.0025 W
- **FM:** 87.6 MHz - 107.9 MHz
- **E-GSM 900/GPRS 900/EGPRS 900:**
TX: 880 - 915 MHz; RX: 925 - 960 MHz
Transmitter power: < 1.923 W
- **E-GSM 1800/GPRS 1800/EGPRS 1800:**
TX: 1710 - 1785 MHz; RX: 1805 - 1880 MHz
Transmitter power: < 1.0 W
-

› Safety information

- Turn off your phone in hospitals and whenever you are near medical equipment. There should always be a distance of at least 20 cm between a pacemaker and the phone when it is on.
- Never try to control a vehicle while holding the phone in your hand. Always comply with relevant national laws and traffic regulations.
- Turn off the phone whenever you are travelling in an aeroplane.
- The phone must be switched off whenever it is near a petrol station or other places with explosive substances.
- Never shine the LED torch in the eyes of people or animals! (Protection class 3)
-  To prevent hearing impairments, do not use the phone on a high speaker volume for extended periods of time. Do not hold the phone to your ear when hands-free mode is activated or the emergency button has been pressed.
- Using a headset on a high volume can cause hearing impairments. Check the volume of the headset you are using.
- The phone and the accessories may contain small parts. Keep the phone out of the reach of young children.
- As a precaution, we recommend disconnecting the phone from the charger during thunderstorms.

-
- The mains adapter serves as a separator between the product and your mains supply. The mains supply must be close to the device and easily accessible.
 - This device has been tested for typical applications where the device is carried on the body. To meet the RF exposure requirements, the minimum distance between the body, in particular the user's head, and the handset including the antenna must be 0 cm. Belt clips, holsters and similar accessories from third parties used with this device must not contain metallic components. Accessories carried on the body that do not meet these requirements may not meet the RF exposure requirements and should be avoided. Only use the device's built-in antenna or an approved antenna.
 - This device complies with the essential requirements and other relevant provisions of **UK Radio Equipment Regulations (S.I. 2017 No. 1206)**. All the important radio test cases have been written.
 - Caution: Risk of explosion if the battery is replaced by the wrong type. Dispose of the used batteries according to the instructions.
 - The device complies with RF specifications when the device is 5mm from the body.

› Intended use

- This phone is robust and designed for mobile use. However, it still needs to be protected from moisture (rain, bathroom water, etc.) and heavy impacts.
- It is only designed for European network standards (AT, BE, CZ, DE, DK, ES, FI, FR, GB, HR, HU, IE, IT, NL, NO, PL, PT, SE, SI, SK, SZ and TR).
- Do not leave it where it will be directly exposed to the sun.
- Using it for any purpose other than that described above will result in damage to the product. Doing this also entails hazards such as fire, electric shocks, etc. This product must not be changed or modified, and the casing must not be opened.
- The adapter is only suitable for use in conjunction with a standard household mains socket that is connected to your electrical grid and uses 100-240 volts, 50/60Hz (10/16A), of alternating voltage.

> Disposal

• Disposing of the packaging

The packaging and packaging aids are recyclable and should be recycled.



• Disposing of the battery

Batteries should never be disposed of as domestic refuse! As a consumer you are legally required to return used batteries. They can be handed in at one of your community's local collection points or at specialist stores.



• Disposing of the device

If this product ever wears out, please don't dispose of it as domestic refuse. To ensure you don't cause damage to the environment, take it to a collection or recycling centre where used devices are processed for recycling in an environmentally friendly manner.



> Declaration of conformity (DOC)

emporia telecom GmbH + CoKG

(Industriezeile 36, 4020 Linz, Austria), hereby declares that the

emporiaHAPPY (E30)

telecommunication or radio device complies with **Directive 2014/53/EU** and **UK Radio Equipment Regulations (S.I. 2017 No. 1206)**.

The full text of the declarations of conformity can be viewed on this web page:

<https://www.emporia.eu/doc>

The CE and UKCA conformity marks are displayed in a large, semi-transparent font. Below them is a handwritten signature in black ink.

Eveline Pupeter

Eveline Pupeter
CEO, emporia Telecom
01/07/2022, Linz/Austria



<https://www.emporia.eu/doc>

- DE Druckfehler, Irrtümer und technische Änderungen vorbehalten.
- EN Misprints, errors and technical changes excepted.
- FR Toutes erreurs d'impression, erreurs et modifications techniques réservées.
- HU Nyomtatási hibák, tévedések és műszaki változtatások joga fenntartva.
- IT Con riserva di errori di stampa, inesattezze e modifiche tecniche.
- NL Drukfouten, vergissingen en technische wijzigingen voorbehouden.
- SI Pridržujemo si pravico do tiskarskih napak, zmot in tehničnih sprememb.

