

Wi-Fi connection or mobile data tariff required

emporia SMART.5 mini

Dear Valued emporia Customer,

Google, Android, Gmail, Chrome and others are trademarks of Google

What's life about? This is the question we focused on at emporia when developing and designing this smartphone for you. Yes, you've read that correctly. We didn't start by asking how much RAM and ROM and how many megapixels and milliampere hours the device should have. We initially put those questions on the back burner and ultimately passed them to our engineers to answer later on.

We were much more interested in what life is actually about. Safety, health, joie de vivre, sustainability, love, solidarity... These are the things that really matter in life.

And it's these things that we've built this smartphone around. It can and will assist you in all these important areas. »It will help me with love?« I hear you ask. It will indeed. Won't it be nice to be able to send your partner a kiss by WhatsApp when they're in another room? Now wondering how this smartphone can increase your joie de vivre?

You'll receive a short video of your grandchild and it'll be as if the sun is shining even if it's actually raining! Safety? It's great that there's an emergency button on the back of the phone, just in case you happen to fall off your e-bike, for example.

We've found answers to the important questions in life. I hope your new emporia smartphone brings you plenty of joy!

Eveline Pupeter
Owner and Managing Director

Notes on this user guide

This guide contains helpful notes and tips, which are indicated as such by this symbol:

- · Warnings are indicated by this symbol:
- · Lots of chapters contain a QR code, which will take you to more information on the chapter's topic on the emporia website.

CONTENTS

| 1. | Preparation 06 | 3. | Using the phone 18 |
|------------|--|-----|-----------------------------------|
| 1.1 | An overview of your smartphone 06 | 3.1 | Battery-saving mode and |
| 1.2 | Box contents | | locking the screen18 |
| 1.3 | Inserting a SIM card, | 3.2 | Buttons on the phone |
| | a memory card and the battery08 | 3.3 | Keys on the screen (soft keys) 19 |
| 1.4 | Charging the battery10 | 3.4 | Keyboard on the screen20 |
| 1.5 1.6 | Turning on the phone | 4. | emporia interface 21 |
| 1.0 | | 4.1 | Home screen |
| 2. | Using the phone | 4.2 | App screen24 |
| | for the first time 12 | 4.3 | Personal screen25 |
| 2.1 | Basic Android and Google settings. 12 Starting the emporia app16 | 5. | Basic functions 26 |
| | | 5.1 | Phone calls27 |
| | | 5.2 | Phone book (contacts)28 |
| | | 5.3 | Messages 31 |
| | | 5.4 | Info centre |
| | | 5.5 | Photo album34 |
| | | 5.6 | Camera35 |

| 6. | Other emporia apps | 37 | 7. | Establishing connections | 48 |
|------|--------------------|-----|--------------------|-------------------------------------|------|
| 6.1 | Torch | 37 | 7.1 | Using a Wi-Fi connection | .48 |
| 6.2 | Silent mode | 37 | 7.2 | Bluetooth | . 50 |
| 6.3 | Alarm clock | 37 | 7.3 | NFC connectivity | . 51 |
| 6.4 | Calendar | 38 | 7.4 | Using a Mobile Data Connection | . 52 |
| 6.5 | Weather | 40 | 7.5 | Wi-Fi hotspot | . 53 |
| 6.6 | Internet | 41 | 7.6 | Flight mode | . 53 |
| 6.7 | E-Mail | 42 | 7.7 | Location | . 53 |
| 6.8 | Calculator | 44 | 7.8 | Connecting to a PC to transfer date | a 54 |
| 6.9 | Magnifier | 44 | 0 | Managattians | |
| 6.10 | QR scanner | 45 | 8. | More settings | 55 |
| 6.11 | Suggested apps | 46 | 8.1 | Audio profiles | |
| 6.12 | Touch Trainer | | 8.2 | Wallpaper | . 55 |
| | | | 8.3 | Date and time | . 55 |
| 6.13 | emporiaCOACH | 8.4 | Language and input | . 55 | |
| 6.14 | Google apps | 4/ | 8.5 | Emporia keyboard | .56 |
| | | | 8.6 | Display | .56 |
| | | | 8.7 | Security settings | . 57 |
| | | | 8.8 | System updates | . 57 |
| | | | 8.9 | System settings | . 57 |
| | | | 9. | Emergency call function | 58 |
| | | | 10. | Appendix | 60 |

1. PREPARATION

1.1 An overview of your smartphone









- Headset port
- 2 USB port
- 3 LED
- 4 Front-facing camera lens
- 5 Loudspeaker (receiver)
- 6 Touchscreen

- Menu button
- 8 Home button
- Back button
- 10 Camera lens with torch/flash
- 1 Emergency button
- 12 Battery cover (Two versions: one with the emergency button and one without it)
- 13 Speaker
- 14 Volume buttons
- 15 On/Off button

1.2 Box contents

- The contents of this package are not suitable for young children and include small parts that can be swallowed.
 - Smartphone
 - · Battery cover
 - Battery cover without an emergency button
 - Battery
 - · USB charging cable
 - User guide
- What to do if a part is defective or missing

Please contact the **Emporia Service Centre**. (see page 60)

emporia smartphone training book



https://www.emporiamobile. com/Products/MOBILES/SMART-TRAiNiNG/SMART-TB-001_V2/ SMART-TB-001_V2_10310-ENG_ WEB.pdf

> Not included in the scope of delivery

SIM card

The SIM card is a chip card that you need to insert into the phone. You will only be able to place calls once you have done this. Your network operator will provide you with the card and the codes belonging to it (PIN and PUK) when you buy a mobile contract. Always choose a tariff with a data package when using a smartphone.

Memory card (increases storage capacity)
 A memory card is a chip card that will increase your smartphone's storage space. Inserting one will enable you to store more photos and install more



How do I insert a SIM card and memory card?

https://www.emporiamobile. com/en/explained-simply/ sim-card-and-sd-card apps. You can purchase these cards from electronics stores.

Headset

Suitable headsets are available from https://iomi.style and electronics stores.

Mains plug

Use a mains plug that you have at home. If you don't have one, you can also purchase one from an electronics store or the **Emporia Service Centre**.

We recommend using a plug with an output voltage of DC 5.0 V and a wattage of 5 W to 10 W.

1.3 Inserting a SIM card, a memory card and the battery

- Before changing the SIM card or data card, always disconnect the charger and turn the phone off.
 - Take off the battery cover.
 Begin with the recess in the bottom left-hand corner of the cover.
- Watch your fingernails when removing the battery cover.
- Avoid bending the cover too much, as doing that can damage it.
 - Insert the SIM card.
 Slide the card in with the contacts facing down. Note the marking next to the bracket

- Insert a memory card. (optional)
 Slide your memory card into the slot with the gold contact facing down.
- Insert the battery.
 Insert the battery, making sure the gold contacts of the battery and the phone are touching each other.
- Press the battery cover down onto the phone until it clicks into place on each side.
- Only use nano SIM cards in this device.

 If your SIM card is a different size, your network operator will swap it for you.

• Only use a memory card that is compatible with this phone, such as a microSD® or a microSDHC® card.

If you use an incompatible SIM card or memory card, you may damage the phone, the card itself or the data stored on the card



What to do if you've used all your storage space.

https://www.emporiamobile. com/en/explained-simply/ memory-used-up

1.4 Charging the battery

- Only use batteries, chargers (5 V, 3 A, 15 W) and accessories that are permitted for this smartphone.
- Before using the unit for the first time or if the unit has not been used for a long time, the battery must be charged. The charging time depends on the charger used and takes approximately 2-4 hours.

> Charging with the charging cable

- Use a standard mains plug that you have at home.
- Insert the USB connector into the phone's USB port.
- Then plug the cable's mains plug into a wall socket.
- To avoid contact faults with the USB connector, only use the charging cable supplied with the phone for charging.

> Charging via a computer

Plug the phone into a USB port on your computer. If necessary, disconnect the USB cable from the mains plug to do this.

Charging your phone via a computer will take longer than charging it via the mains.



How do I charge the battery correctly?

https://www.emporiamobile. com/en/explained-simply/ battery-charging

> Battery indicators on the phone

- When the battery is empty:
 The phone will beep and a warning will appear on the screen. The battery icon is red and the LED flashes.
- When the battery is being charged:
 The battery icon is shown filling up and the LED is red.
- When the battery is fully charged:
 The battery icon is full and the LED is green. You can now disconnect the charging cable from the phone and then unplug the cable from the wall socket.
- In Settings > Battery, you can view the remaining battery life and current charge level, and can close applications to extend the battery life.

1.5 Turning on the phone

- Before you use your phone for the first time, remove the protective film from the screen.
- Press and hold the on/off button for at least two seconds.
- The emporia logo will appear on the screen and a melody is played.
- When you turn your phone on the first time, the start-up process can take up to two minutes. The emporia logo will be on the screen when this is happening.

 Please do not interrupt this process.



What does my smartphone need in order to work? https://www.emporiamobile.com/en/explained-simply/necessary-for-operation

1.6 Entering a PIN code

Enter the four-digit PIN code for your SIM card when asked to do so and confirm the entry.

- You can change or turn off your PIN code in Settings > Security > More security settings > SIM card lock.
- Pou have a maximum of three attempts to enter your PIN code correctly. If you enter the wrong number three times in a row, you will only be able to unblock your SIM card with your PUK code. You will find your PIN code and PUK code in the documents supplied with your SIM card by your network operator.

2. USING THE PHONE FOR THE FIRST TIME

2.1 Basic Android and Google settingsWhen you use your smartphone for the

When you use your smartphone for the first time, you need to select a number of settings.

Selecting a language

- Tap on the pre-selected language.
- A list showing all the available system languages will then appear.
- Select the language you want to use to operate your smartphone.

Starting Android settings Now tap on START to define a few required settings for the Android operating system.



Step-by-step instructionshttps://www.emporiamobile.
com/en/explained-simply/
google-account-setup

- Connecting to a Wi-Fi network If possible, establish a Wi-Fi connection, so that future essential updates and downloads don't use your mobile data.
- Read more about this in chapter »7.1 Using a Wi-Fi connection« from page 48.

> Copying apps and data

Your smartphone will now check whether any updates for the Android operating system are available and, if there are any, install them automatically.

Used a smartphone before? In the next step, you can install apps and data from your old smartphone. To do this, tap on **NEXT**, select a transfer method and follow the instructions on the screen. If this is your first smartphone or you don't want to transfer any data, tap on **DON'T COPY**.

Setting up a Google account

- In the next step, you will be asked to sign in with your Google account.
 Enter your Gmail address and the password for the account to do this, or create a new Google account if you don't yet have one.
- Now you can select settings regarding the security and storage of Google services. Read through the pre-selected settings carefully and disable any individual functions you don't require.
 Then tap on ACCEPT.

Selecting a search provider

Select the Internet search engine provider whose service you want your phone to use when carrying out a search guery.

> Protecting your smartphone

Now select a screen lock, so that your phone cannot be operated by anyone not authorised to do so.

- Also choose whether the code has to be entered when the device is first started.
- Enter your chosen code.
- Enter the code a second time to ensure you haven't made any typing errors and then confirm it.

> Enabling Google Assistant

Now you can install the full version of Google Assistant. Please note that you are granting Google a wide range of permissions if you do this.

- Tap either **ACTIVATE** or **NO THANKS**.
- If you want to control Google Assistant using voice commands, set up Voice Match by tapping on I AGREE and following the instructions on the display.



How does the voice assistant work?

https://www.emporiamobile. com/en/explained-simply/ voice-assistant

- Setting up Google Pay If you would like to link your Google account to a payment facility, tap on ADD CARD and enter the required details.
- You can skip this setting for now and add it in your Google account later on.
- > Changing the wallpaper and font size
 Finally, you can personalise your
 smartphone's wallpaper and adjust the
 font size. These settings will be applied
 to all your phone's system, but not to
 the emporia app. Now complete the
 installation process.



App tip: Google Pay https://www.emporiamobile. com/en/explained-simply/ google-pay

2.2 Starting the emporia app

When you have completed the Android and Google settings, you will see the Android home screen.

Tap on the emporia icon.



> Legal notices

Agree to the terms and conditions, the data privacy policy and the app permissions for the emporia app.
To do this, check the box next to
"I have read and I agree to all of the above."

Confirm this by tapping on NEXT.

- > Setting the emporia app as the home screen Select the following settings to make your smartphone start with the emporia interface.
 - Tap on **NEXT**.
 - Tap on emporia
 - · Tap on Set as default





STARTING emporia

https://www.emporiamobile. com/en/explained-simply/ start-emporia

> emporia app registration

Enter your name, age group, gender and email address and confirm these details by tapping **NEXT**.

- Then tap on FINISH to complete the set-up process for the emporia app.
- Your smartphone will now start up with the emporia interface every time.
- > Concluding the set-up process
- A notification will appear in the Info centre if any of the installation steps have been skipped.

New apps after installation

The emporia app includes a whole bundle of applications. You will therefore now see a number of new icons on your smartphone, which represent the following functions:

- On the emporia home screen:
 Phone, Messages, Photo album and Info centre
- On the Favourite apps screen:
 Camera, Alarm clock, Play Store,
 Weather, Calendar, Internet and Email



Google Play Store

https://www.emporiamobile. com/en/explained-simply/ google-playstore

3. USING THE PHONE

3.1 Battery-saving mode and locking the screen

If you don't use your phone for a certain period of time, the screen will switch to battery-saving mode and go black. You can reactivate the screen by pressing the on/off button briefly.

Locking the screen can also protect your phone from unintentional input on the touchscreen.

Locking the screen manually

- Press the on/off button briefly.
- The screen will go black and lock, and the phone will beep.

The screen is now protected from any unintentional input.

> Setting the screen to lock automatically

You can choose from the following device security options in

Quick settings > More settings > Security settings > Screen lock:

- None
- Swipe
- PIN: Enter a code of your choice.

 
3.2 Buttons on the phone

 
> On/Off button

- Hold the on/off button down for at least
 2 seconds to turn the phone on or off.
- Press this button briefly to wake the phone from or put it into battery-saving mode.

Volume buttons

The volume buttons on the side of your phone allow you to adjust the volume, mute the phone when it is ringing or mute the alarm clock.





- In Calls and notifications trigger an alarm accompanied by vibration
- Alerts for calls and notifications are muted
- Slide controller for media volume
- 3 Volume control button:

Slide controller for Media volume, Call volume, Ring and notification volume and Alarm volume

You'll find the emporia silent mode in Quick settings (see page 37).

Press this button to call for help in an emergency. (see page 58)

3.3 Keys on the screen (soft keys)

> ○ Home

3.

- This button will take you back to the home screen any time if you tap it briefly.
- If you tap and hold this button, the Google Assistant will be activated.

→ Sack

This button allows you to undo your last action



Using the touchscreen

https://www.emporiamobile. com/en/explained-simply/ touchscreen

> ☐ Menu

Tapping this button will display all your recent apps, i.e. those that are currently active, in windows alongside each other.

- To switch to one of the apps displayed, tap on it briefly.
- Close an app by swiping the image of the app up.



3.4 Keyboard on the screen

Whenever text input is necessary and you tap on the text input field, the software keyboard will automatically appear on the bottom half of the screen.

There are several different keyboards, which you can access by tapping the grey buttons:

- Keyboard with capital letters
- 2 Keyboard displaying numbers and characters
- 3 Keyboard displaying symbols and emoticons 4
- 5 Standard letter keyboard



Speech to text

https://www.emporiamobile. com/en/explained-simply/ speech-to-text

4.1 Home screen

The home screen is the starting base for all your smartphone's operations. You can press the home button to call the home screen up and return to the starting base at any time.



The home screen consists of the following elements:

> 1 Wallpaper

The wallpaper is a decorative background image and can be set according to your personal preferences. The time, date and weather are inserted on top of the image. To change any of these settings, tap and hold the screen for a few seconds.

- 2 Below the wallpaper, there are four buttons which have been preset with the most important functions:
- Phone calls and contacts (see page 28)
- Messages (see page 31)
- Photo album and Camera (see page 34))
- Info center (see page 33)
- To change the function assigned to one of these buttons, tap and hold the button for a few seconds.



emporia interface

https://www.emporiamobile. com/en/explained-simply/ emporia-app

> 3 Toolbar:



Battery icon: Indicates the battery's charge status. If you tap on the icon, the battery's charge status is indicated as a percentage.

- Alarm clock: The alarm clock is on.
- Silent mode: The silent audio profile is on.
- Flight mode: Flight mode is on.
- ■■■ Signal strength: Provides information about the reception. Tapping on it will open the extended display panel, which can show the following symbols:
 - Indicates roaming status;
 additional costs may be
 incurred when you're
 connected to another network

- **Wi-Fi:** A connection to a Wi-Fi network is established.
- Wi-Fi: A connection to a Wi-Fi network is not established.
- GPS is on
- GPS is on and has detected your position
- Headset: Headset or an external loudspeaker is plugged in.
- Call forwarding: Call forwarding is activated.
- NFC is on.
- * Bluetooth is on.
- A Bluetooth device is connected
- **Wi-Fi hotspot:** The smartphone is available as a Wi-Fi hotspot for other devices.

Quick settings:

Tapping on the gear icon will open **Quick settings**. Here, you have an overview of your smartphone's most important settings and can turn functions on or off quickly.

- Torch (see page 37)
- Alarm clock (see page 37)
- Silent mode (see page 37)
- Wi-Fi (see page 48)
- Bluetooth (see page 50)
- **NFC** (see page 51)
- Wi-Fi hotspot (see page 53)
- Mobil data (see page 52)
- Flight mode (see page 53)
- Location (see page 53)

- Audio profiles (see page 55)
- Wallpaper (see page 55)
- Date and time (see page 55)
- Language and input (see page 55)
- Emporia keyboard (see page 56)
- **Display** (see page 56)
- Security settings (see page 57)
- System updates (see page 57)
- System settings (see page 57)

4.2 App screen

On the app screen, you have access to all the apps that are installed on your phone.

You can place the apps that you personally intend to use most directly on this screen.

Tap and hold one of the buttons for a few seconds and select your chosen function from a list.

The button in the bottom right-hand corner, **All apps**, opens a list that displays all the apps available on the smartphone.



> Installing apps

Under **Suggested Apps** you will find a selection of practical applications to download or use Google Play.

> Deleting apps

- Open All apps on the app screen
- Swipe to the end of the list.
- Tap on **Delete**. Deletable apps are now marked with a box.
- Tap on the box of the app you want to delete.
- Now tap on **Delete** in the top left-hand corner.
- Confirm the deletion process by pressing **OK**.

4.3 Personal screen

You access the personal screen by swiping a finger across the screen from left to right.
You can assign functions to all the buttons on the personal screen according to your individual preferences.



> Favourites

You can save contacts that you intend to call often here.

- Tap on a contact button.
- The list of your contacts will open. Select a contact from the list by tapping on it.
- This contact will now be displayed as a favourite. If you tap on the favourite, the phone will call the contact immediately.

> My phone number:

Your own phone number will automatically be displayed here.

If you tap on it, you can do the following with the number:

- Send it to someone by email
- · Text it to someone
- Copy it
- · Edit it
- Depending on your network provider, it is sometimes not possible to store your own phone number.

> Voicemail:

Here you can access your voicemail and specify settings for it:

- Tap on the button briefly to listen to your voicemail.
- Tap and hold your finger on the screen to go to the settings for your voicemail.

5. BASIC FUNCTIONS

> Emergency call

Here you can specify settings for the emergency call function:

Read more about this in chapter »9.

Emergency call function« from page 58.

- Save up to five emergency contacts.
- Enable the button on the back of the phone.
- · Start an emergency call.

You can select the following functions (apps) on the home screen:

- · Phone calls and phone book
- Messages
- · Photo album and camera
- · Info centre

>> Phone calls and phone book



This application enables you to place calls and manage your contacts.



How do I know when my smartphone is ready to use?

https://www.emporiamobile. com/en/explained-simply/ ready-to-use

5.1 Phone calls

There are three ways of entering a phone number to make a call:

- Phone book: Select a contact from the list and tap on the name.
- Keypad: Enter the number using the keypad and then press Call.
- Recent calls: Select a contact from your list of recent incoming and outgoing calls. Missed calls will be displayed at the top of the list and marked with a red bar.

> Accepting or rejecting a call

If you are called, you can accept the call by tapping the button briefly or reject the call by tapping the button.

> Options during a phone call

■ Loudspeaker

Sound off

Dial keys

More

Call+

Home screen

> Deleting your call history

To delete entries from the list of recent calls, select Delete. Next, tap on the boxes beside the entries you want to delete in order to select them.

Then tap on the red **Delete** button, which will remove the selected calls.



What is roaming?

https://www.emporiamobile. com/en/explained-simply/ roaming

5.2 Phone book (contacts)

The phone book displays all the contacts available on the phone.



> Searching for a contact

To find a saved contact in the phone book, enter the first few letters of the contact you are looking for in the search field. All the contacts that begin with these letters will then be compiled in a short list.

Tap on a name in the list to call the contact.

If you want to get to the bottom of the contact list, the best thing to do is swipe over the head icons on the right-hand side of the screen. If you swipe over the names of the contacts, it is very easy to accidentally call a contact.

Adding a contact

- If you want to add a new contact record, tap on Add contact.
- Enter the contact's phone number and then confirm it by pressing Next.
- 3. Enter the person's given and family names and then save them. You have now created a contact record for this person and can expand it by adding other details such as a contact photo, their landline number, their email address and their birthday.

Transferring contacts from your old phone to this smartphone

There are several ways to transfer the contacts from your old phone to this smartphone:

Importing contacts from your SIM card
 Save all the contacts onto the SIM card
 while the SIM card is in your old phone
 and then insert the SIM card into your
 new smartphone.

When you insert the SIM card into your new smartphone for the first time, the contacts that are stored on the SIM card will be detected automatically. You will be asked to transfer the contacts to the phone. Once you've done this, the imported contacts will appear in the phone book.

To import contacts from the SIM card later on, select **Import/export contacts > Import from SIM card** at the end of the list in the phone book. You can now import individual contacts by tapping and holding them. Or press the Options key and select **Import all**.

However, if you use a new SIM card because you have bought a new tariff for the smartphone, for example, there are other options. Your specialist retailer will be able to transfer data from your old SIM card to the new one using a SIM card reader.

Importing contacts in a VCF file
 Export the contacts on your old phone
 in a VCF file

Transfer the VCF file to your smartphone using an external memory card or a Bluetooth connection.

Select Import/export contacts > Import from storage at the end of the list in the phone book. Locate the vcf file on the memory card and open it to import the contacts.

Manage contacts with a PC
 You can also transfer the contacts from the old phone to your PC and from there back to the new phone.



Importing contacts

https://www.emporiamobile. com/en/explained-simply/ import-contacts

Opening and editing contact records

If you want to open a contact record, tap on the contact's photo 1 and then on the si-iconc 2. The contact record containing the contact's photo, mobile number, landline number, email address and birthday will then be

displayed.

• If you press a button in the list, the action connected to the button will be performed. For example, tapping on the phone number will start a call. If you want to change any details, select a button from the list, edit or add to the data, and save the change.




Add Contact

OO Voicemail

Ann Fischer

Caroline Beyer

Elli Gruber

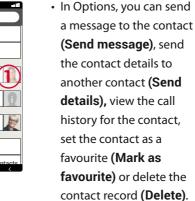



 If you want to change existing details, select Edit. Under Options you can add another field to the contact.

5.3 Messages

This application enables you to send and receive text messages (SMSs) and multimedia messages (MMSs).



> Writing a message

Select **Write message**. Enter the text using the keyboard on the screen.

> Sending message

Enter a recipient that you want to send the message to.

Select the field **To** or select **Send** on the keyboard.

You can now search for the recipient in your contacts, type in a phone number using the keypad or select a number from your recent calls list.

> Sending to multiple contacts

If you want to send the message to multiple recipients at the same time, select **Multiple contacts**. In this way, however, only entries from contacts can be selected.

> Reading a message

A notification will inform you when you have received a message. The number of new messages will then be displayed in a red circle next to the messages icon on the home screen.

Tap on a new message in **Messages** to read it. You can also tap on the notification itself to read the new message.



emporia app: Messages https://www.emporiamobile. com/en/explained-simply/ emporia-messages

> Drafting a message

You can switch to another application in the middle of writing a message any time.

When you return to **Write message**, the message you have started will be displayed.

> Deleting messages

Swipe to the end of the list of recent messages and tap on **Delete**.

Tap on the boxes beside the messages you want to delete in order to select them.

To then remove the marked messages, tap on the red **Delete** button and confirm your decision when prompted by tapping on **Yes**.



SMS or messaging apps? https://www.emporiamobile.com/en/explained-simply/sms-vs-messenger

> Forwarding a message

Open the message sequence that contains the message you want to forward

Tap on the message and select **Forward** in the options. The text will be copied into a new SMS message. Here, you edit the text if necessary, add the recipient and then send the message.

- What is the difference between an SMS, an MMS, email, a messaging app and a notification?
 - SMS (Short Message Service) is a format for short messages and only allows text in messages to be sent.



Whatsapp

https://www.emporiamobile. com/en/explained-simply/ whatsapp

- MMS (Multimedia Messaging Service) is a type of SMS that allows small amounts of data such as photos to be sent in addition to text.
- Email is a messaging system that people are generally familiar with from using a computer. You need an email address to use it.
- Messaging apps are apps that were developed to be used on a smartphone.
 There are lots of different messaging apps, one being WhatsApp.
- Notifications are small pieces of information that your smartphone uses to tell you about activities on the phone.

What are updates and what do I have to do with regard to them?

https://www.emporiamobile. com/en/explained-simply/ updates

5.4 Info centre

This application provides you with an overview of all the notifications you have received regarding various apps. These notifications include missed calls, new messages, updates to installed apps, etc.

Opening notifications

Open the **Info Centre** and tap the message you want to read. When the notification has been read, it no longer appears in the list.

> Deleting notifications

A notification will normally disappear as soon as you have tapped on it.

Regardless of this, however, you can also delete the entire list by tapping on **Delete all**.

5.5 Photo album

This application enables you to view and manage photos, and also activate the camera and take photos.



The photo album displays all your photos as thumbnails and sorts them chronologically by month. You can adjust the number of photos displayed at a time using the + and – buttons, which are shown briefly when you open the photo album.

> Viewing a photo

Tap on a photo in the photo album to open it.

Tap on the photo briefly to make the following buttons visible:

and > : Move to other photos

iii : Delete the current photo

☆: Mark the current photo as a favourite.

Options: Delete, Set as wallpaper, Share, Zoom in, Zoom out and Rotate (If a video is selected, only **Delete** and **Share** are available.)

I Zoom into the image by tapping it twice.



emporia app: Photo album https://www.emporiamobile. com/en/explained-simply/ emporia-photo-album



 
Managing photos using Google Fotos

https://www.emporiamobile. com/en/explained-simply/ google-photos

- Sending and copying a photo Open a photo and select Options. Selecting Share allows you to send the photo to others by Bluetooth, email, MMS and other applications. You can copy the photos to a PC when you establish a USB cable connection.
- If you want to send more than one photo at the same time, tap and hold your finger on one photo on the photo album overview screen. You can then select multiple photos and share or delete them in one go.
- Do you want to know where a photo is stored? Tap and hold a thumbnail in the photo album for a few seconds and then select **List**. The folder in which the photo is stored on your phone will appear.

5.6 Camera

To activate the camera, select **Take picture** in Photo album. Or open the **Camera** app in **All apps**.



> Enlarging or shrinking the image section (zooming)

You can crop the image in two ways:

- Zoom in and out using + and -:
 Tap the + button to bring the subject closer. The button will shrink the image again.
- Zooming with two fingers



emporia app: Camera

https://www.emporiamobile. com/en/explained-simply/ emporia-camera

> Selecting flash mode

Tap on the fash icon and choose between Flash on f, Flash off sand Auto flash fa.

> Options for the camera:

Front camera / Back camera, Video mode / Photo mode, Effects, Magnifier, QR scanner, Picture size / Video quality, Filter and Storage

> Taking a selfie

If you want to take a selfie, open **Options** and switch from the back camera (on the back of the phone) to the **Front camera** (on the front of the phone). You will then be able to see yourself on the screen, as you would if you were looking into a mirror, and taking a good selfie will be much easier!

> Recording a video

Switch to Video mode in Options.

You can use both the back camera and front camera in video mode too. Use the front camera if you want to film yourself. To start recording, tap on the red button with the film camera symbol. A stopwatch in the top left-hand corner will tell you how long you've been recording. To stop, press the red button again.



The perfect smartphone photo

https://www.emporiamobile. com/en/explained-simply/ perfect-smartphone-photos The following apps were developed by emporia and have deliberately been kept very simple. You can access them on the **Favourite apps** screen, in **All apps** and in **Quick settings**. You can find apps with more complex functions in the **Google Play Store**.

6.1 Torch

Activating the **Torch** in Quick settings enables you to turn the LED on the back of your smartphone on and off.

6.2 Silent mode

- Activate **Silent mode** in Quick settings.
- Next, enter a time at which you want
 Silent mode to automatically end
 and the phone to start ringing when it receives calls again.
- Read more about this in chapter »Volume buttons« from page 19.

6.3 Alarm clock

> Setting the alarm clock



- Tap on Alarm time and enter your desired time using the numeric keypad.
 Save your changes. The alarm clock will now sound at the time you have set.
- Tap on Alarm ringtone to set the sound the alarm makes when it rings. Please note that some alarm sounds are quite loud, while others are softer and quieter.
- Adjust the Volume of the alarm ringtone for the alarm clock
- You can enable or disable the alarm app using the on/off button in the Alarm app or Quick settings.



emporia app: Alarm clock https://www.emporiamobile. com/en/explained-simply/ emporia-alarm

> Turning off the alarm clock When the alarm clock goes off:

- Use the Volume button to mute the alarm clock without turning it off.
- Tap on **Stop** to turn off the alarm clock.
- Tap on **Snooze** to set the alarm clock to go off again in 5 minutes.
- If the phone is turned off, the alarm is turned off as well. The alarm will therefore not sound when the phone is off.

6.4 Calendar

The current month will be shown in the overview.
Today's date will be in blue.



> Entering a new event

- Tap on New entry and specify whether you want to enter an Event or a Birthday.
- Enter a name for the new event.
 This name is what the event will be shown as on the calendar.
- Now enter a time frame for the event.
 Today's date and the time 30 minutes from now will be entered by default.
- Tap on the date and time to change these details



emporia app: Calendar https://www.emporiamobile. com/en/explained-simply/ emporia-calendar

- In Reminders, you can specify how long before the event you would like to receive a notification.
- In Repetition, you can set the event you've just entered to recur daily, weekly, monthly or yearly.

Don't forget to save every event you enter and any changes you make!

- Opening and editing an event In the month calendar overview, the days you've entered events on will be highlighted.
 - If you tap on a day button, a list of all the hours of this day will be displayed.
 - Events that have already been entered will be highlighted by coloured areas and labelled with the name of the event.
- Be aware that the list is long! Some events may not be visible at first glance. Swipe up and down over the list, so that you can see events entered at other times of the day.

 If you tap on an event, the details of the event will open and you can make changes to them.

> Searching for an event

- To do this, tap on New entry in the month overview and then on Next event in the list that appears.
- All your events from today's date onwards will now be listed in chronological order.
- You can of course then tap on one of these events to open all its details and also edit the event.

6.5 Weather

Setting up the weather app

- Open Weather > Settings.
- Turn the weather function on.
- Next, add a location you want to know the weather for.
- Enter the Location (your desired place) in the Search bar. A list of places will be displayed. Select the place you want from these.
- Select Back to view the weather forecast for the next few days for this location. The current temperature in this place will be shown above the date on the home screen

- If you want to know the weather in another place, specify a new location.
- Now select the place you want the weather for and confirm your choice by tapping on the tick.



emporia app: Weather https://www.emporiamobile. com/en/explained-simply/ emporia-weather

6.6 Internet

Searching for information on the internet



- Open the **Internet** app.
- The search bar is the main element of the browser. It is where you enter search terms you want to find information on. Tap in the **Search bar** to open the keyboard.

Enter a search term.

 When the term you're looking for appears, you can tap on the suggested word(s) or you can finish entering your term and then confirm you want to search for it by tapping on Go.

- The browser will now search the Internet for websites related to your search term.
- The results of your search will be displayed as a list of web pages. The domain of each website will be written underneath the respective site's title.
 The domain is the address of the web page. Each web page will also be accompanied by a short description, which can help you decide whether the page will be of interest to you.
- A suggested web page will only open when you tap on its domain.
 Tap on **Back** to return to the list of search results.



emporia app: Internet

https://www.emporiamobile. com/en/explained-simply/en/ explained-simply/emporiaweather

6.7 E-Mail

Setting up an existing email account on your smartphone



Already using email on a computer and now want to be able to read and write emails on your smartphone? Make sure you know your account details before you begin setting up your email account on your smartphone:

- What is your email address?
- What is the password for this account?

> Displaying newly received emails

If you have received an email, your smartphone's LED indicator will flash and a corresponding notification will be shown in the Info centre.

Open the **Info centre** and tap on the notification to display the new email. You can also open the **Email** app in the **All apps** list and go straight to your **Inbox**.



Linking an email account https://www.emporiamobile. com/en/explained-simply/ email-setup



Email inbox

https://www.emporiamobile. com/en/explained-simply/ email-inbox

> Writing emails

When you open an email app, the first screen you see will normally be the inbox. Many apps have a pencil icon somewhere on this screen. Tapping on the pencil will open the input window so you can write an email. In emporia's pre-installed app, you have to tap on the Write email button.

Just as you do when writing an email on a computer, you now enter the recipient in the **To** row, enter a **Subject** and write your email in the space for text. When you've finished writing, you can also attach files such as photos before sending the email.

The **Cc** field is for you to enter recipients you would like to receive a copy of the email. If you want to send an email to several recipients at the same time, but don't want your recipients to see each other's email addresses, put all the addresses in the Bcc field.

Displaying old emails

Every email account is divided into various folders such as **Inbox**, **Sent emails** and **Drafts**. In the emporia email app, you can switch to other folders if you tap on the **Inbox** button.

> Deleting an email account

To do this, open the page in **Settings** that displays all the **Accounts** connected to this phone. Select the email account you want to delete and then tap on **Remove account**.

6.8 Calculator

Enter the numbers you require using the numeric keypad and connect them using one of the basic arithmetic operators. To get the answer, tap the = button, and to clear the display bar, tap **Delete**.



6.9 Magnifier

 Open the Magnifier app or select the Magnifier option in the Camera app.



- Now focus the phone on the object you want to magnify while maintaining fair distance between the phone and object.
 If the image doesn't automatically come into sharp focus, tap on the screen.
- Tap on the + and symbols repeatedly until the object has reached your desired size.
- You can also use the torch symbol to illuminate the object if necessary.

6.10 QR scanner

This application enables you to read QR codes. Open the **QR scanner** app or select the **QR scanner option** in the **Camera** app.



> Using the QR scanner

 Open the QR scanner app. On the screen, you will see the camera image with a square highlighted inside the camera frame.



emporia app: QR scanner https://www.emporiamobile. com/en/explained-simply/ emporia-qr-scanner

- Now focus the smartphone on the QR code you want to scan while maintaining a fair distance between the phone and object. Move the camera lens until the QR code is inside the highlighted square.
- You will then see a horizontal red line moving up and down, which tells you that the camera is continuously scanning the viewfinder image. This will continue until the QR code has been read. If the image doesn't automatically come into sharp focus, tap on the screen.
- The scan result will then be displayed automatically. This could be a piece of information such as a web address that was concealed by the QR code symbol. Now select one of the options available: Open the web address in a browser or copy the link and send it elsewhere using another app.

6.11 Suggested apps

These are app suggestions that emporia recommends to its users based on the country they're in.

6.12 Touch Trainer

If using a touch-sensitive screen is something completely new to you, the Touch Trainer could be a helpful game for you.

It will teach you how to **Tap**, **Swipe** and **Zoom** in and out in a fun way that involves simple exercises. Enjoy!

6.13 emporiaCOACH

The emporiaCOACH is a pre-installed app that offers you the opportunity to obtain new knowledge. It will teach you the basics of the digital world in just a few steps that are easy to understand. You do not need to be connected to the Internet to complete this course. Once you have finished this foundation

course, you will be offered subsequent

courses that are available to download.



emporia app: emporiaCOACH

https://www.emporiamobile. com/en/explained-simply/ emporia-coach

6.14 Google apps

In addition to the emporia apps, numerous Google apps have been pre-installed. A few examples are listed below:

· Google Play Store

This pre-installed Google app offers you access to countless apps that are available to download from the Internet.

· Google Maps

This pre-installed Google app enables you to use your smartphone as a navigation device. As well as the route-finding and navigation functions, it provides a variety of information about the respective location, destination and the traffic.

Google services overview https://www.emporiamobile.

com/en/explained-simply/ aooale-services

· Google Assistant

Google Assistant is a function that listens to your voice. It can search for information on the Internet for you, provide information and start apps if you give it a command.



Google Maps

https://www.emporiamobile. com/en/explained-simply/ google-maps



Google Assistant

https://www.emporiamobile. com/en/explained-simply/ google-assistant

7. ESTABLISHING CONNECTIONS

7.1 Using a Wi-Fi connection

To set up a Wi-Fi connection, you need the name of the Wi-Fi network (network SSID) and the corresponding password.

If you already have a Wi-Fi network at home, you can usually find this information on the underside of the Wi-Fi router.

> Enabling the Wi-Fi function

- Open Quick settings by tapping on the gear icon on the home screen.
- Activate the Wi-Fi function on your phone by tapping on the On/ Off indicator button
 beside Wi-Fi.



 The On/Off indicator button will now display On. The detail text on the Wi-Fi text button will now indicate that the phone has found Wi-Fi networks (Wi-Fi networks available).



Internet connection background information https://www.emporiamobile. com/en/explained-simply/ internet-connection

- Selecting and connecting to a Wi-Fi network
 - Tap on the Wi-Fi text button 2.
 A list of available Wi-Fi networks will now be displayed.
 - Tap on the network you want to connect your phone to.
 - Enter the password for the network in the input field. Tap on the checkbox to display the password and check that it is correct.
 - Confirm the entry by tapping on Connect.



- > Checking your Wi-Fi connection
 - The connection between your smartphone and the Wi-Fi network will be established.
 - As soon as the connection has been established, the detail text will say Connected.



The Wi-Fi network to which the phone is connected will now appear in the phone's **Quick settings** as well.

From now on, your smartphone will automatically connect to this Wi-Fi network whenever it is within range. This will only happen, however, if the Wi-Fi function on the smartphone is enabled.

7.2 Bluetooth

Bluetooth is a wireless connection between electronic devices. It enables you to connect your phone to other Bluetooth-compatible devices such as a hands-free kit or an external speaker.

> Turning on Bluetooth Open Quick settings and turn on Bluetooth in More settings.

> Finding Bluetooth devices

Tap on the text button **Pair new device**.

All the available Bluetooth devices in your vicinity will be listed. If the device you're looking for doesn't appear on the list, it first



needs to be made visible, i.e. put in pairing mode. Refer to the user guide for the Bluetooth device to find out how to do this



Bluetooth

https://www.emporiamobile. com/en/explained-simply/ bluetooth

> Coupling a Bluetooth device

Select the device you want to connect to your phone. Usually you will have to enter a code on your phone or the Bluetooth device for the connection to be established. In most cases, this code will be 0000 or 1234. You will find information on this in the user guide for the Bluetooth device.

- Devices that have been coupled before will be detected and connected automatically when they are near your emporiaSMART.
- Disconnecting a Bluetooth device If you want to disconnect a Bluetooth device from your phone, open the settings for the device in the paired devices list and select Unpair.

7.3 NFC connectivity

NFC (near-field communication) is a communication standard used to transfer data wirelessly. It enables data to be transferred between devices that are very close to each other relatively easily.

> What is NFC used for?

Contactless payment

Payments made with an NFC-enabled mobile phone basically work in the same way as payments with an NFC-enabled bank card. You also have to install an app that will perform the payment process using NFC when you get to a till. And to make such payments possible, you have to save a payment option in the app.



NFC

https://www.emporiamobile.com/en/explained-simply/nfc

Continuous blood sugar monitoring
 A small sensor that's attached to your body continuously measures your blood sugar level. The NFC connection is used to transfer this data to a device that can read it, such as your smartphone. The advantage of this over the usual blood sugar monitoring method is that you'll no longer have to prick your finger and will also be able to view continuous readings instead of just readings taken at certain moments.

> Turning on NFC

- Open Quick settings and turn on NFC in More settings.
- The position your phone above or in line with the device you want to establish a connection with, ensuring the two NFC modules are as close to each other as possible.
- The NFC connection will then be established automatically and will normally be indicated by a visual or audible signal.

7.4 Using a Mobile Data Connection If you allow your phone to use mobile data, you can use the Internet, receive notifications, etc. any time.

Enabling your mobile data facility

- Open Quick settings by tapping on the gear icon on the home screen.
- Expand the list by tapping on More settings:
- The On/Off indicator button will now display On.



If your mobile network tariff doesn't include any data, you must leave the mobile data function on your phone disabled at all times, because turning it on can incur additional costs for you. If this is the case, you will have to be connected to a Wi-Fi network whenever you wish to use apps that require a connection to the Internet.

7.5 Wi-Fi hotspot

Turn your smartphone into a mobile router, so that you can connect other devices such as a laptop to the Internet when you're out and about.

7.6 Flight mode

Flight mode will disable all your smartphone's radio-frequency signal transmission technologies, meaning you can no longer make or receive phone calls, surf the Internet or send messages. You will still be able to use data already saved on the smartphone and apps that do not require the phone to be connected to the Internet.

7.7 Location

This function enables your smartphone's current location to be detected and is available to apps that have been granted permission to access the phone's location.



Wi-Fi hotspot

https://www.emporiamobile. com/en/explained-simply/ hotspot



GPS

https://www.emporiamobile.com/en/explained-simply/gps

7.8 Connecting to a PC to transfer data

You can plug your emporia device into your PC and then transfer data easily. To do this, plug the USB connector end of the USB cable supplied with the phone into your PC and the other end into your phone.

- The phone will detect the connection and the following message will appear in the Info centre: Device being charged via USB.
- Tap on this notification.
- A pop-up window containing a list of options for how you can use the USB connection will then appear.
- Select File transfer. The phone will now be shown on your PC as an external storage device and you can copy files.
- The process may differ from this description depending on your PC's operating system.



Data transfer

https://www.emporiamobile. com/en/explained-simply/ pc-connection

8.1 Audio profiles

· Media volume:

Volume for media such as audio files and videos

· Call volume:

Volume for telephone conversations

· Ring and notification volume:

Volume for the ringtone and the notification sound

Alarm volume:

Volume at which the alarm rings

Vibration and haptics:

When this function is enabled, the phone will vibrate as well as ring when it receives calls.

Ringtone:

Select a ringtone from the list for incoming calls.

· Notification sound:

Select a tone that you want to sound when your phone receives notifications.

· Dial pad tones:

When digits are entered using the keypad, the corresponding dial pad touch tones will sound

Screen lock sound:

The phone will make a clicking sound every time you lock or unlock the screen.

· Touch sounds:

A tone will also sound every time you tap the touchscreen.

8.2 Wallpaper

Select a photo from the photo album and set it as the wallpaper for the home screen.

8.3 Date and time

Here you can select settings for the date, time, time zone and the formats you would like these displayed in.

8.4 Language and input

Here, you specify the language for your phone and select settings for the **Keyboard**.

8.5 Emporia keyboard

- Input languages: Choose whether you want the selected system language to be the only input language as well or specify manually which languages should be activated as input methods. If you choose to have more than one language activated, you will then be able to switch between your chosen languages when writing a message by holding your finger down on the spacebar.
- The following general settings can be activated for the Emporia keyboard.
- Auto-capitalisation
 The first letter of every sentence will be capitalised.



emporia keyboard

https://www.emporiamobile. com/en/explained-simply/ emporia-keyboard

· Vibrate on keypress

The phone will vibrate every time a button on the emporia keyboard is pressed.

Sound on keypress

Every press of a button on the emporia keyboard will be accompanied by a clicking sound.

Pop-up on keypress

Every time a button on the keyboard is pressed, the selected letter will be shown as a pop-up

8.6 Display

Select settings for the screen such as **Brightness**, **Adaptive brightness**, **Screen timeout** and **Auto-rotate screen**, among many others.

8.7 Security settings

To prevent your phone from being misused by other people, you can set a screen lock and a SIM card lock here. You can also specify how your phone will be protected when apps are installed.

8.8 System updates

This phone allows you to download the latest software for it yourself and therefore update the system and improve applications yourself.

- 1. Open Quick settings > More settings > System updates.
- 2. Check that the battery is at least 30 % charged.

If it isn't, the download cannot start.

System updates
https://www.emporiamobile.
com/en/explained-simply/
system-update

- A message will appear telling you whether or not there is any new software available. If there is, select **Download** to start the update process. The bar indicates how the download is progressing.
- 4. Once the download has been completed, select **Update now**. The software update will then be installed in the background. You can continue using the smartphone as normal during this process.

8.9 System settings

Tapping on System settings will open the settings for the operating system Android 13.

9. EMERGENCY CALL FUNCTION

Your phone has an emergency call function that you can tailor to your specific needs. The Emergency button on the back of the device enables you to call people you trust for help quickly in an emergency.

- Use the battery cover with the recess for the emergency button.
- The Emergency button
 is switched off by default.
- Swipe a finger across the home screen from left to right to go to the Personal screen.

Tap on **Emergency call**.

4. Save your personal emergency contacts.

Emergency

1.Empty

2.Empty

3.Empty

4.Empty

5.Empty

Emergency sys

Delete

- Do not enable the emergency button until you have specified your emergency contacts.
- > How do I make an emergency call?

Press and hold the Emergency button

on the back of the phone for

3 seconds.



Details of the emporia emergency call function https://www.emporiamobile. com/en/explained-simply/ emporia-emergency



How do I stop an accidental emergency call?

- If you've started an emergency call by mistake, press the red key for 3 seconds to hang up. This will interrupt the emergency call cycle.
- Next, turn the phone off and on again to restore your emergency call status settings.

> How do I save an emergency contact?

- 1. Open >Emergency call settings<.
- 2. Select an empty position.
- The list of your contacts will open. Tap on a contact you want to be notified in an emergency.
- 4. Specify whether the contact is a private individual or a help organisation and also whether they should be sent an emergency call message in addition to receiving the call itself.

What does the recipient of an emergency call have to do?

- The emergency contact has to end the call and ring back the person in need of help. If this doesn't happen, the call will be ended automatically after 1 minute and the next emergency contact will be called.
- The emporia phone will automatically answer the callback, re-establishing the connection to the emergency contact.

10. APPENDIX

- Manufacturer:
 emporia telecom GmbH + CoKG
 Industriezeile 36, 4020 Linz, Austria
- Importer: emporia UK and Ireland Limited Cardinal Point, Park Road, Rickmansworth, Hertfordshire, WD3 1RE, United Kingdom
- Brand name: emporia
- Model: emporiaSMART.5mini (E5mini)
- > Support
- Emporia Service Centre service@emporiatelecom.co.uk Monday-Friday, 12°°-4°° pm
- United Kingdom EN +44 1923 947778 www.emporiatelecom.co.uk/ support/contact
- Ireland · EN
 +353 0818 000 102
 www.emporiatelecom.ie/
 support/contact

> Guarantee

(6 months for the battery and accessories) begins when the device is handed over to you. You must be able to verify the time of the handover by providing us with the original proof of purchase (receipt or invoice) with the phone's IMEI number on. Keep these documents in a safe place. Any work or service provided under the warranty will be provided in accordance with the warranty terms and conditions in place at the time of your purchase. The warranty is only valid if original batteries supplied by emporia have been used. To the maximum extent permitted by applicable law, emporia is under no circumstances responsible for the following situations:

Your 12-month warranty period

- · Any loss of data or income
- Any special, incidental, consequential or indirect damage, regardless of how the damage has been caused.

- > Declaration of conformity (DOC) emporia telecom GmbH + CoKG (Industriezeile 36, 4020 Linz, Austria) hereby declares that the emporiaSMART.5mini (E5mini) telecommunication or radio device complies with Directive:
 - 1907/2006 REACH
 - 2011/65/FU RoHS
 - 2014/53/EU Radio Equipment Directive (RED)
 - (EU) 2019/320 Caller location determination for emergency calls
 - (EU) 2022/2380 Amendments to the Radio Equipment Directive
 - UK Radio Equipment Regulations (S.I. 2017 No. 1206.

The full text of the declaration of conformity can be viewed on this web page:

www.emporiamobile.com/doc

Eveline Pupeter 01/08/2023, Linz, Austria emporia Telecom CEO

> Technical product details

- Dimensions: 138.2×66×10.65 mm
- · Weight: 158 g
- Battery: Li-ion 3.85 V, 2500 mAh, 9.625 Wh (replaceable)
- AC adapter output: DC 5.0 V, 1.5 A, 15 W
- Standby time: 190 h*
- Call time: 550 min*
 (*The battery life can be reduced depending on network coverage and active applications.)
- Internal antenna: SAR (body): 1.17 W/kg SAR (head): 0.59 W/kg SAR (limbs): 2.78 W/kg
- Operating temperature range: -10°- +40° €
- Wireless technologies:
 Bluetooth V5.0,
 GPS+GLONASS+Beidou+Galileo,
 WiFi 2.4G (802.11 b/g/n),
 WiFi 5G (802.11 a/n/ac)
- · Hearing aid compatible: M4/T4
- Screen resolution: IPS 4.95" 19:9; 460 × 960 px

- Camera: 13+0.3+2 MP (back camera) 8 MP (front camera)
- Operating system: Android 13
- RAM: 4GB
- Memory (ROM): 64 GB
- SD card: < 256 GB

Frequencies

- Bluetooth: 2402-2480 MHz; Transmitter power: < 0.005 W
- Bluetooth LE: 2402-2480 MHz;
 Transmitter power: < 0.0008 W
- 2.4 G WiFi: 2412-2472 MHz;
 Transmitter power: < 0.047 W
- 5 G WiFi: 5150-5250 MHz; Transmitter power: < 0.026 W
- 5 G WiFi: 5225-5875 MHz;
 Transmitter power: < 0.026 W
- GPS: (receiver) 1.57542 GHz
- BDS: (receiver) 1.561098 GHz
- GLONASS: (receiver) 1.602 GHz
- Galileo: (receiver) 1.561098 GHz
- NFC: 13.56 MHz

- GSM 900: 880-915, 925-960 MHz;
 Transmitter power: < 2.004 W
- **GSM 1800:** 1710-1785, 1805-1880 MHz;

Transmitter power: < 0.867 W

 WCDMA Band I: 1920-1980, 2110-2170 MHz; Transmitter power: < 0.253 W

 WCDMA Band VIII: 880-915, 925-960 MHz; Transmitter power: < 0.262 W

 LTE FDD Band 1: 1920-1980, 2110-2170 MHz; Transmitter power: < 0.265 W

 LTE FDD Band 3: 1710-1785, 1805-1880 MHz; Transmitter power: < 0.221 W

 LTE FDD Band 7: 2500-2570, 2620-2690 MHz; Transmitter power: < 0.201 W

 LTE FDD Band 8: 880-915, 925-960 MHz; Transmitter power: < 2523 W

 LTE FDD Band 20: 832-862, 791-821 MHz; Transmitter power: < 0.214 W

Restriction of use

- In UK and EU, LTE/NR UE operation in band 28 is restricted to 703~736 MHz (Tx) and 758~791 MHz (Rx).
- In UK and EU, NR UE operation in band 78 is restricted to the frequency range 3400~3800 MHz.
- RF power reduction triggered by the combination of proximity sensors and receiver detection mechanisms as described in this TCF
- The frequency range from 5150~5350 MHz is restricted to indoor use in accordance with the relevant legal requirements.

 
> Intended use

- This phone is robust and designed for mobile use. However, it still needs to be protected from moisture (rain, bathroom water, etc.) and heavy impacts.
- It is only designed for European network standards (AT, BE, CZ, DE, DK, ES, FI, FR, GB, HR, HU, IE, IT, NL, NO, PL, PT, SE, SI, SK, SZ, TR).
- Do not leave it where it will be directly exposed to the sun.
- This product contains magnets. It is therefore important to keep it away from objects that could be affected by the magnets, such as credit cards and implanted medical devices. If you use an implanted medical device, consult your doctor before using this product.
- Using it for any purpose other than that described above will result in damage to the product. Doing this also entails hazards such as fire, electric shocks, etc. This product must not be changed or modified, and the casing must not be opened.
- The adapter is only suitable for use in conjunction with a standard household mains socket that is connected to your electrical grid and uses 100-240 volts/50/60Hz (10/16A) of alternating voltage.

> Safety instructions

- Please read all the safety information in this user guide carefully and follow the advice.
 This is the only way you will avoid hazards and infringements.
- Turn off your phone in hospitals and whenever you are near medical equipment. There should always be a distance of at least 20cm between a pacemaker and the phone when it is on.
- Never try to control a vehicle while holding the phone in your hand.
 Always comply with relevant national laws and traffic regulations.
- Turn off the phone whenever you are travelling in an aeroplane.
- The phone must be switched off whenever it is near a petrol station or other places with explosive substances.
- Never shine the LED torch in the eyes of people or animals! (Protection class 3)

To prevent hearing impairments, do not use the phone on a high speaker volume for extended periods of time. Do not hold the phone to your ear when hands-free mode is activated or the emergency button has been pressed.



- The phone and the accessories may contain small parts.
 Keep the phone out of the reach of young children.
- As a precaution, we recommend disconnecting the phone from the charger during thunderstorms.
- The mains adapter serves as a separator between the product and your mains supply. The mains supply must be close to the device and easily accessible.
- This device has been tested for typical applications where the device is carried on the body. To meet the RF exposure requirements, the minimum distance between the body, in particular the user's head, and the handset including the antenna must be 0 cm. Belt clips, holsters and similar accessories from third parties used with this device must not contain metallic components. Accessories carried on the body that do not meet these requirements may not meet the RF exposure requirements and should be avoided. Only use the device's built-in antenna or an approved antenna.
- This device complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. All the important radio test cases have been written.
- Caution: Risk of explosion if the battery is replaced by the wrong type. Dispose of used batteries according to the instructions.
- The device complies with RF specifications when the device is 5 cm from the body.

> Disposal

Disposing of the packaging The packaging and packaging aids are recyclable and should be made available for reuse.



 Disposing of the battery
 Batteries should never be disposed of as domestic refuse! As a consumer you are legally required to return used batteries. They can be handed in at one of your community's local collection points or at specialist

Disposing of the device

stores.

If this product ever wears out, please don't dispose of it as domestic refuse. To ensure you don't cause damage to the environmer



damage to the environment, take it to a collection or recycling centre where used devices are processed for recycling in an environmentally friendly manner.

- DE Druckfehler, Irrtümer und technische Änderungen vorbehalten.
- EN Misprints, errors and technical changes excepted.
- FR Toutes erreurs d'impression, erreurs et modifications techniques réservées.
- IT Con riserva di errori di stampa, inesattezze e modifiche tecniche.
- NL Drukfouten, vergissingen en technische wijzigingen voorbehouden.

emporia SMART.5 mini

PartNo: E5mini_BDA-V1_16006-ENG | 202311